



**Shiatsu Massagesitz  
Shiatsu Seat Cover  
Modell 94348**



Bedienungsanleitung  
Instruction Manual



## Lieferumfang:

- Massagesitz
- Abnehmbares Kopfkissen
- Steuergerät
- Netzteil 230 V
- 12V Adapter für Zigarettenanzünder

## Zeichenerklärung:

Die folgenden Symbole werden in der Betriebsanleitung und auf dem Typenschild eingesetzt.



**WARNUNG** Warnhinweise, um Verletzungen und Gesundheitsgefährdung zu vermeiden.



**ACHTUNG** Sicherheitshinweise über mögliche Beschädigungen des Gerätes / Zubehörs.



**HINWEIS** Wichtige Information



Das Gerät ist doppelt schutzisoliert und entspricht der Schutzklasse 2



Nur zur Nutzung in trockenen Räumen.

## Das Gerät darf nicht im fahrenden Fahrzeug benutzt werden !!!!

### 1. ÜBER SHIATSU-MASSAGE:

Shiatsu ist eine Form der Körpermassage, welche ursprünglich vor ca. 100 Jahren in Japan entwickelt wurde. Es basiert auf der traditionellen chinesischen Medizin.

Im Shiatsu wird der Mensch in seiner Ganzheit erfasst – als Einheit von Körper, Atem und Geist. Das harmonische Zusammenspiel dieser drei Ebenen ist ein zentraler Aspekt in der SHIATSU-Arbeit. Ziel der Shiatsu-Massage ist das körperliche, emotionale und mentale Wohlbefinden.

### 2. WISSENSWERTES:

Der Massagesitz besitzt rotierende Massageköpfe welche den Druck und das Kneten einer Shiatsu Massage nachahmen.

Das Gerät mit seinen senkrechten Bewegungen und rotierenden Massageköpfen ermöglicht eine kraftvolle, intensive Massage des kompletten Rückens. Zum Gebrauch platzieren Sie den Massagesitz auf einem bequemen Sitzplatz. Das Gerät ist nur für den privaten Gebrauch und nicht für medizinische oder kommerzielle Zwecke bestimmt.

Der Massagesitz bietet folgende Vorteile:

- Kraftvolle Shiatsu Massage des Rückens
- Rollende Massage entlang der Wirbelsäule
- Verstellbare Massagezonen (oberer, unterer & kompletter Rücken)
- Automatische Abschaltung nach 15 min
- Mit leuchtenden Massageköpfen und einstellbarer Heizfunktion
- Abnehmbare Abdeckung und Kopfkissen
- Separates Netzteil

### 3. ANWENDUNG

Das Gerät ist ausschließlich zur Rückenmassage von Menschen gedacht. Es ersetzt keine medizinische Behandlung. Nutzen Sie das Massagegerät nicht, wenn einer der folgenden Warnungen auf Sie zutrifft:

Das Nutzen des Gerätes ist nicht zulässig:

- Bei Krankheiten oder Rückenverletzungen (z.B. offene Wunden, ...)
- Bei Kindern
- Während der Schwangerschaft
- Während des Schlafes
- Im fahrenden Auto
- Bei Tieren
- Während Aktivitäten mit unerwarteten Reaktionen
- Während der Einnahme von Substanzen, welche die Reaktionszeit beeinträchtigen (z.B. Schmerztabletten, Alkohol, ...)
- Wenn die Dauer länger als 15min beträgt (Überhitzungsgefahr) – Abkühlung für mindestens 15min vor erneutem Gebrauch

Bitte konsultieren Sie einen Arzt, wenn Sie unsicher sind, ob Sie den Massagesitz nutzen dürfen.

Die Nutzung ist nicht gestattet für Personen (auch Kindern) mit körperlicher, sensorischer oder geistiger Einschränkung und/oder Personen mit mangelndem Verständnis für das Gerät und die Bedienung, es sei denn sie sind unter Beaufsichtigung einer Person, die für deren Sicherheit zuständig ist oder erhalten Anweisungen für die Nutzung des Gerätes.

Kinder sollten beaufsichtigt werden, um sicherzustellen, dass das Gerät nicht als Spielzeug verwendet wird.

Das Gerät hat eine Heizfunktion in den Massageköpfen. Personen, die wärmeempfindlich sind, müssen diese Funktion mit großer Sorgfalt nutzen.

Sie sollten Ihren Arzt vor Gebrauch konsultieren:

- Wenn Sie an einer ernsten Krankheit leiden oder sich von einer Operation erholen, die den oberen Rücken betrifft
- Wenn Sie einen Herzschrittmacher, ein Implantat oder andere Hilfsmittel haben
- Bei Thrombose
- Bei Diabetes
- Bei Schmerzen unbekanntes Ursprungs

Das Gerät ist nur für Zwecke bestimmt, die in dieser Gebrauchsanweisung beschrieben sind. Der Hersteller kann nicht haftbar gemacht werden bei Schäden durch unsachgemäße oder fahrlässige Nutzung.

**Das Gerät darf nicht im fahrenden Fahrzeug benutzt werden !!!!**

### 4. SICHERHEITSHINWEISE

Bitte lesen Sie die Gebrauchsanweisung sorgfältig. Nichteinhalten der unten aufgeführten Informationen kann zu Personenschaden oder Sachschaden führen. Bewahren Sie die Anleitung an einem sicheren Platz auf, wo sie auch von anderen Personen gelesen werden können, die dieses Gerät nutzen. Bitte geben Sie diese Anweisungen zusammen mit dem Gerät weiter, wenn Sie es verkaufen oder weiterreichen.



**WARNUNG** Achten Sie darauf, das die Verpackung nicht in die Hände von Kindern gelangt. Erstickungsgefahr!  
Elektro-Schock

Wie jedes andere elektronisches Gerät muss auch dieses Gerät sorgfältig und aufmerksam behandelt werden, um das Risiko von Elektro-Schocks zu verhindern.

Aus diesem Grund muss das Gerät wie folgt gehandhabt werden:

- Nur mit dem mitgelieferten Netzteil verwenden
- Nicht benutzen bei Beschädigung des Gerätes oder Zubehörs
- Nicht während eines Gewitters benutzen

Bei Defekt oder technischer Störung schalten Sie das Gerät umgehend aus und trennen Sie es vom Netzteil. Ziehen Sie niemals am Netzkabel oder am Gerät, um es vom Stromnetz zu trennen. Tragen oder halten Sie das Gerät niemals am Netzkabel. Stecken Sie niemals Nadeln, Reißzwecken oder andere scharfe Gegenstände in das Gerät.

Stellen Sie sicher, das Massagegerät, Schalter, Netzteil und Kabel nie in Berührung mit Wasser, Dampf oder anderen Flüssigkeiten kommen. Verwenden Sie den Massagesitz nur in trockenen geschlossenen Räumen. (niemals z.B. in der Sauna, im Bad, ...)

Greifen Sie nie nach einem Gerät, das ins Wasser gefallen ist. Ziehen Sie sofort den Netzstecker vom Stromnetz. Das Gerät darf nicht benutzt werden, wenn es selbst oder Zubehör beschädigt ist. Lassen Sie das Gerät nie fallen.

## REPARATUREN



**WARNUNG**

- Reparaturen an elektrischen Geräten dürfen nur von qualifizierten Personen durchgeführt werden. Falsch durchgeführte Reparaturen können zu erheblichen Gefahren für den Nutzer führen. Im Fall einer Reparatur kontaktieren Sie bitte unseren Kundenservice oder einen autorisierten Händler.
- **Der Reißverschluss des Shiatsu Massagesitzes darf nicht geöffnet werden.** Dieser wurde nur eingebaut zur Herstellung des Gerätes.
- Wenn das Netzteil oder Kabel beschädigt ist, muss es von einem autorisierten Händler ausgetauscht werden.



**WARNUNG:** Brandgefahr

Bei falscher Benutzung des Gerätes besteht Brandgefahr.

Das Massagegerät darf daher nur wie folgt genutzt werden:

- Betreiben Sie das Gerät niemals unter Abdeckungen wie Decken oder Kissen.
- Betreiben Sie das Gerät niemals in der Nähe von Benzin oder anderen leicht entzündlichen Materialien.

## BEDIENUNG



**ACHTUNG:** Nach jeder Benutzung und vor der Reinigung schalten Sie das Gerät aus und entfernen Sie das Netzteil.

- Stecken Sie nie Gegenstände in das Gerät oder in rotierende Teile. Stellen Sie sicher, dass alle beweglichen Teile immer frei beweglich sind.
- Nutzen Sie das Gerät in einer aufrechten Position, legen Sie es niemals auf den Boden
- Setzen oder stellen Sie sich niemals mit Ihrem gesamten Gewicht auf rotierende Teile und platzieren Sie keine Gegenstände auf dem Gerät
- Schützen Sie das Gerät vor hohen Temperaturen.

## HINWEIS ZUR ENTSORGUNG:




### ACHTUNG:

Halten Sie sich an die lokalen Vorschriften zur Entsorgung. Das Gerät sollte gemäß Vorschrift 2002/96/EC-WEEE (Waste Electrical and Electronic Equipment) entsorgt werden. Wenden Sie sich hinsichtlich der Entsorgung an Ihre Kommunalbehörde.




## 5. GERÄT UND BEDIENUNG

### Shiatsu Massagesitz (Vorderseite)

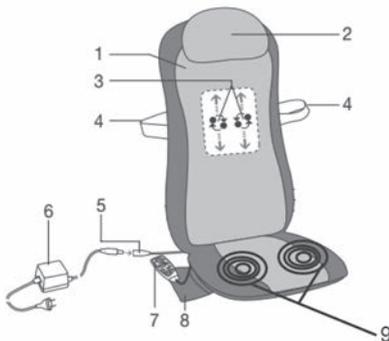

- 1) Schutzabdeckung
- 2) Kopfkissen
- 3) 4 Massageköpfe
- 4) Befestigungsgurt
- 5) Verbindungsstück
- 6) Netzteil mit Gerätestecker and Netzkabel
- 7) Steuergerät
- 8) Tasche für Steuergerät
- 9) Vibration

### Steuergerät

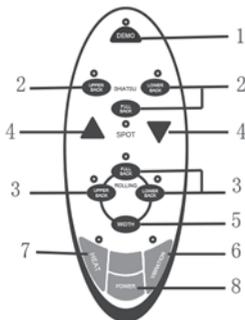

- 1) **DEMO** (Vorführ-Knopf)
- 2) **SHIATSU** (Shiatsu-Massage): **UPPER BACK** (oberer Rücken) / **LOWER BACK** (unterer Rücken) / **FULL BACK** (kompletter Rücken)
- 3) **ROLLING** (rollierende Massage): **UPPER BACK** (oberer Rücken) / **LOWER BACK** (unterer Rücken) / **FULL BACK** (kompletter Rücken)
- 4) **SPOT** (lokale Massage)
- 5) **WIDTH** (Breite der Massage)
- 6) **VIBRATION** (Vibration)
- 7) **HEAT** (Heizfunktion)
- 8) **POWER** (Ein-/Ausschalter)

## 6. INBETRIEBNAHME

- Befestigen Sie die Schutzabdeckung auf dem Massagesitz mit den Klettstreifen. Bei Benutzung ohne die Schutzabdeckung wird die Massage als härter empfunden.
- Platzieren Sie den Massagesitz aufrecht auf einer passenden Sitzgelegenheit (Stuhl, Sofa, Autositz o.ä.) Vergewissern Sie sich, das der Massagesitz mit der gesamten Fläche aufliegt und die Rückenlehne eine ausreichende Höhe hat.
- Benutzen Sie die flexiblen Befestigungsgurte und Klettstreifen zur Befestigung des Massagesitzes.
- Verbinden Sie das Netzteil und den Massagesitz mit dem Gerätestecker
- Verbinden Sie das Gerät mit dem Stromnetz über die Steckdose.

## GERÄT BEDIENEN

Drücken Sie Ihren Rücken sanft gegen das Massagegerät. Stellen Sie sicher, das Sie sich in einer bequemen Position befinden. Die Massage muß stets angenehm und entspannend sein. Stoppen Sie die Massage oder verändern Sie Ihre Position oder den Druck, wenn es schmerzhaft oder unbequem ist.

Bewegen Sie kein Körperteil, insbesondere die Finger, zwischen die Massageköpfe.

Sitzen Sie bequem und aufrecht auf dem Massagesitz. Stellen Sie sicher, das Sie zentral sitzen und sich die Massageköpfe links und rechts entlang der Wirbelsäule bewegen.

Schalten Sie die Massage mit dem **POWER-Knopf** (Knopf 8) an. Das Gerät startet automatisch mit der SHIATSU Massage.

### Sie können folgende Einstellungen wählen:

#### 1. SHIATSU Massage

Drücken Sie den **SHIATSU-Knopf** (Knopf 2). Wählen Sie die gewünschte Massage-Region aus: **UPPER BACK** (oberer Rücken) / **LOWER BACK** (unterer Rücken) / **FULL BACK** (kompletter Rücken)  
Lokale Massage z.B. Shiatsu Massage ohne senkrechte Bewegung kann durch drücken der SPOT Knöpfe ausgewählt werden. Die Position kann durch Drücken und Halten einer der beiden SPOT Knöpfe verändert werden, bis die gewünschte Position erreicht ist.

#### 2. ROLLING Massage

Drücken Sie den Knopf **ROLLING** (Knopf 3). Wählen Sie die gewünschte Massage-Region aus: **UPPER BACK** (oberer Rücken) / **LOWER BACK** (unterer Rücken) / **FULL BACK** (kompletter Rücken)  
**WIDTH** Wenn die rollierende Massage aktiv ist, ist die Breite änderbar, was Sie durch den Knopf **WIDTH** einstellen (Knopf 5)

**VIBRATION** Drücken Sie den Knopf **VIBRATION** (Knopf 6), um die Funktion einzuschalten

**HEAT** Drücken Sie den Knopf **HEAT** (Knopf 7), um die Funktion einzuschalten.

- Benutzen Sie das Massagegerät nie länger als 15min und lassen Sie es danach abkühlen. Eine längere Nutzung kann die Muskeln überreizen und kann Verspannung statt Entspannung zur Folge haben. Die Massage kann jederzeit mit dem POWER-Knopf beendet werden. Beachten Sie bitte, das beim ausschalten die Massageköpfe erst zur Ausgangsposition im Lendenbereich zurückkehren. Sobald diese Position erreicht ist, schaltet das Gerät ab.
- Wenn das Gerät durch 2x Drücken eines Massagebereiches gestoppt ist, wird ebenso die

Ausgangsposition eingenommen und dann schaltet das Gerät ab.

- Trennen Sie das Gerät während des Betriebs nicht vom Stromnetz. Schalten Sie das Gerät immer zuerst aus und warten Sie, bis die Ausgangsposition erreicht ist.  
Trennen Sie das Netzteil nach Gebrauch vom Stromnetz

**ANMERKUNG:**



Das Gerät hat einen automatischen Abschaltmechanismus mit einer maximalen Benutzerzeit von 15min.

## 8. Reinigung & Aufbewahrung

**ACHTUNG**



- Vor Reinigung das Netzteil vom Stromnetz und Gerät trennen.
- Reinigen Sie das Gerät nur wie vorgeschrieben. Flüssigkeiten dürfen niemals in das Gerät oder Zubehör gelangen.
- Kleinere Flecken können mit einem feuchten Tuch oder Schwamm und einer kleinen Menge flüssigen Reinigungsmittels für empfindliche Materialien entfernt werden, wenn nötig. Benutzen Sie keinesfalls Reinigungsmittel, die Lösungsmittel enthalten.
- Benutzen Sie das Gerät erst wieder nach vollständiger Trocknung.

## AUFBEWAHRUNG

Wenn Sie das Gerät über einen längeren Zeitraum nicht benutzen, empfehlen wir die Aufbewahrung in der Originalpackung ohne es zu beschweren.

## 9. PROBLEMBEHANDLUNG

Problem	Grund	Lösung
Massageköpfe rotieren mit geringer Geschwindigkeit	Die Belastung der Massageköpfe ist zu hoch	Reduzieren Sie den Druck auf die Massageköpfe
Massageköpfe bewegen sich nur im oberen oder unteren Bereich	Die Massage wurde nur für diese Region gewählt	Drücken Sie den Knopf FULL BACK, UPPER BACK oder LOWER BACK, um die Massage-region zu verändern
Die Massageköpfe bewegen sich nicht	Das Gerät ist nicht mit dem Netzteil verbunden.	Verbinden Sie das Gerät mit dem Netzteil und schalten Sie es ein
	Das Gerät ist nicht angeschaltet	Schalten Sie das Gerät mit dem POWER Knopf an. Wählen Sie die Massage-region aus

### Items included in the package:

- Seat cover
- Removable cover and neck pillow
- Power supply unit
- These operating instructions

### Explanation of symbols

The following symbols are used in the operating instructions and on the type plate:



**WARNING** Warning of risks of injury or health hazards.



**CAUTION** Safety information about possible damage to appliance/accessories.



**Note** Important information.



The device has double protective insulation and therefore complies with protection class 2.



Only use indoors.

## 1. ABOUT SHIATSU MASSAGE

Shiatsu is a form of body massage which was originally developed in Japan around 100 years ago. It is based on ideas anchored in traditional Chinese medicine, in particular the meridian system, i.e. the paths in the human body along which energy is conveyed.

The aim of any Shiatsu massage is to promote the physical, emotional and mental wellbeing of the person being treated. To do this, energy blocks and bottlenecks in the meridians need to be dissolved and the selfregulating ability of the body needs to be stimulated.

Shiatsu therapists achieve this by exercising pressure in flowing movements along the meridians. Although Shiatsu can be literally translated as “finger pressure”, practitioners also use the heels of their hands, their elbows and knees as well as their fingers. In the process, the therapist will use his or her full body weight in order to generate the required pressure.

## 2. GETTING TO KNOW YOUR APPLIANCE

Your massage device has rotating massage heads which imitate the pressure and kneading motions of a Shiatsu massage.

This device, with its vertically moving and rotating massage heads, offers a powerful, intensive deep massage over the entire back. You have to place the Shiatsu seat cover on a suitable seat pad for this purpose. The device is only for private use and is not intended for medical or commercial purposes.

In addition, the massage device offers the following advantages:

- powerful Shiatsu massage along the spine with localised massage,
- rolling massage along the spine,
- adjustable massage zones (upper, lower or the entire back),
- automatic shutoff function after 15 minutes,
- with illuminated massage heads and adjustable heating function,
- removable cover and neck pillow,
- separate power supply unit.

### 3. PROPER USE

This device is solely intended for massaging the backs of human beings. It cannot replace medical treatment. Do not use the massage device if any of the following warnings apply to you.

#### WARNING

Use of the massage device is prohibited in the following cases:

- not with changes caused by disease or injury in the back region (e.g. disc problems, open-wounds),
- not on children,
- not during pregnancy,
- never while you sleep,
- not in the car,
- not on animals,
- not during activities during which an unexpected reaction may be dangerous,
- not while ingesting substances that reduce reaction times (e.g. painkiller medications, alcohol),
- never longer than 15 minutes (risk of overheating) and allow it to cool off for at least 15 minutes before using it again.

Please consult your doctor if you are unsure whether or not the massage device is suitable for you. This device is not intended for use by persons (including children) with restricted physical, sensory or mental capabilities and/or by persons lacking the required understanding of the equipment and how it is used, unless they are supervised by a person who is responsible for their safety or they are given instructions on how to use the device.

Children should be supervised to ensure that they do not use the device as a toy.

The device has an heating function in the massage heads. Persons who do not feel heat must be careful when using this function.

You should consult your doctor before using the massage device if:

- you suffer from a serious illness or are recovering from an operation on the upper body,
- you are fitted with a cardiac pacemaker, implant or other aid,
- Thromboses,
- Diabetes,
- in case of pains of unclarified origin.

The device is only intended for the purpose described in these operating instructions. The manufacturer cannot be held liable for damage occurring as a result of inappropriate or careless use.

### 4. SAFETY INFORMATION

Please read these operating instructions carefully. Failure to observe the information provided below can lead to personal injury or material damage. Keep these instructions in a safe place where they can also be read by other persons using the device. Always pass on these instructions together with the appliance if you sell it or pass it on.



**WARNING** Keep children away from the packaging materials. Risk of suffocation.  
Electric shock

Just like any other electrical appliance, this massage device must be handled with due care and attention in order to prevent the risk of electric shock.

For this reason, the device must only be operated as follows:

- only with the supplied power supply unit at the mains voltage indicated on the power supply unit.
- Do not use the device if damage to the device itself or any of its accessories is evident.
- Never use the appliance during a thunderstorm.

In the event of a defect or malfunction, switch the device off immediately and disconnect it from the power supply. Never pull on the power cable or on the appliance in order to disconnect the power supply from the mains outlet. Never hold or carry the device by the power cable. Keep the cables away from hot surfaces. Do not pinch, kink or twist the cables. Do not stick in any pins, needles or sharp objects.

Make sure that the massage device, the switch, the power supply unit and the cable do not come into contact with water, damp or other liquids. Therefore, use the device only in dry interior rooms (e.g. never in the bath, sauna).

Never try to retrieve the device if it falls into water. Disconnect the plug immediately from the mains outlet. Do not use the device if damage to the device itself or any of its accessories is evident. Do not subject the device to any impact and do not drop it.

## REPAIRS



### WARNING

- Repairs to electrical appliances must only be carried out by qualified persons. Incorrect repairs can lead to considerable danger for the user. In the event of repairs, please contact our customer service or an authorized dealer.
- **The zip fastener on the Shiatsu massage device must not be opened.** It is only fitted for reasons relating to the manufacturing of the device.
- If the power supply unit or cord is damaged, it must be replaced by an authorised dealer.



### WARNING: Fire hazard

There is a risk of fire if the device is used incorrectly or if it is not used according to these operating instructions.

For this reason, the massage device must only be operated as follows:

- Never use the device under covers, such as blankets or pillows.
- Never use the device in the vicinity of petrol or other easily flammable materials.

## HANDLING



**CAUTION** Switch the device off and disconnect the power supply unit after every use and before every cleaning.

- Never insert any objects into openings on the device, and never insert anything into the rotating parts. Make sure that all moving parts can move freely at all times.
- Operate the device in an upright position only, never place it flat on the floor.
- Never sit or stand on the moving parts of the device with all your weight and do not place objects on the device.
- Keep the device away from high temperatures.

## DISPOSAL




### CAUTION



Follow local regulations regarding the disposal of materials. The appliance should be disposed of according to Regulation 2002/96/EC-WEEE (Waste Electrical and Electronic Equipment). In case of queries, contact the municipal authorities responsible for waste disposal in your area.


## 5. APPLIANCE DESCRIPTION

### Shiatsu massage pillow (front)

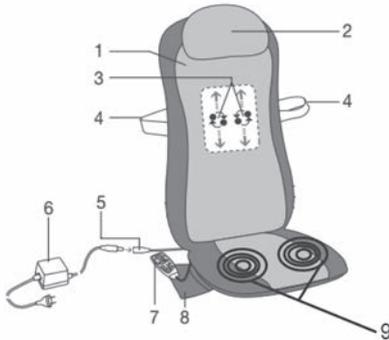

- 1 Protective cover
- 2 Neck pillow
- 3 Four massage heads
- 4 Fastening straps
- 5 Connecting coupling
- 6 Power supply unit with plug connector and power cable
- 7 Hand switch
- 8 Storage bag
- 9 VIBRATION

### Hand switch

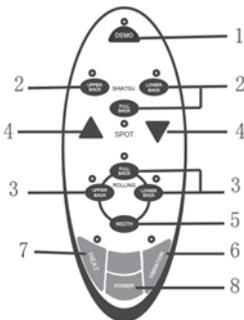

- 1 **DEMO** button
- 2 **Shiatsu** button (full \upper\lower\back)
- 3 **Rolling** button (full \upper\lower\back)
- 5 **WIDTH** button (Massage width )
- 4 **SPOT** buttons (localised massage)
- 6 **VIBRATION** button (vibration massage )
- 7 **HEAT** button (heat massage)
- 8 **Power** button

## 6. START-UP

- Fasten the protective cover to the surface of the Shiatsu seat cover with the Velcro straps. It is also possible to massage without the protective cover; this is generally found to be “harder”.
- Position the seat cover upright on a suitable seating arrangement with seating surface and backrest (chair, sofa, or similar). Ensure that the seat cover is supported over its entire area and has a sufficiently high backrest.
- Use the flexible fastening straps and Velcro strips to secure the Shiatsu seat cover.
- Connect the power supply unit and the seat cover with the plug connector.
- Connect the device to the mains by plugging the plug into the socket.

## 7. OPERATION

Gently press your back against the massage device to start with. Then make sure that you are in a comfortable position before gradually shifting your weight onto the massage device. The massage must be pleasant and relaxing at all times. Stop the massage or change your position or the contact pressure if you find it is painful or unpleasant.

- Do not force any part of your body, in particular your fingers, between the rotating massage heads and their mountings in the device.
- Sit comfortably and upright on the seat cover. Ensure you sit centered and such that the massage heads can move to the left and right of your spinal column.
- Switch on the massager with the POWER button. The device starts automatically with the Shiatsu massage

**You can select other settings as described below:**

### 1. Shiatsu massage

Press the **SHIATSU** button (button 2). Select the desired massage region with **FULL BACK** , **UPPER BACK** and **LOWER BACK**.

Spot massage, i.e. Shiatsu massage without vertical movement, can be selected by pressing one of the two SPOT buttons (button 4). The position of the localised massage can be changed by pressing and holding one of the two SPOT buttons until the desired position is reached.

### 2. Rolling massage

Press the ROLLING button (button 3). Select the desired massage region with FULL BACK , UPPER BACK and LOWER BACK.

**Massage Width:** When using the rolling massage, massage width are available, which can be selected using the WIDTH button(button 5).

**Vibration function:** Press the VIBRATION button (button 6) to switch on the Vibration function.

**Heating function:** Press the HEAT button (button 7) to switch on the heating function of the massage heads.

- Do not use the massage device for longer than 15 minutes and then allow it to cool. Using the device for longer can over-stimulate the muscles and cause tension instead of relaxation. The massage can be finished at any time by pressing the POWER button. Please note that on switching off, the massage heads first return to the starting position at the lumbar region. Once this position is reached, the device switches off.
- If the device is stopped by pressing a massage area button twice, it also returns to the starting position after 15 minutes and then switches off.
- Do not disconnect the device from the mains supply during operation. Always switch it off first and wait until it has returned to the initial position.
- Disconnect the power supply unit plug from the mains after using the device.



#### Note

- The device has an automatic shut-off mechanism set to a maximum operating period of 15 minutes.

## 8. CARE AND STORAGE



### WARNING

- Before cleaning disconnect the power supply unit from the mains socket and disconnect it from the device.
- Only clean the appliance in the manner specified. Fluid must never be allowed to enter into the device or accessories.
- Smaller stains can be removed using a cloth or moist sponge together with a little liquid detergent for delicate fabrics if necessary. Do not use any cleaning agents containing solvents.
- Do not use the device again until it is completely dry.

## STORAGE

If you do not use the device for longer periods, we recommend storing it in the original packaging in a dry place without weighting it down.

## 9. IN THE EVENT OF PROBLEMS

Problem	Cause	Remedy
Massage heads rotating at reduced speed.	The load on the massage heads is too great.	Reduce the contact pressure on the head.
Massage heads only rotate in the upper or lower region.	The massage has been activated for the limited region.	Press the FULL BACK, UPPER BACK or LOWER BACK buttons to change the massage region.
Massage heads not moving.	Appliance not connected to the power supply.	Connect the plug to the mains supply and switch on the appliance.
	Device not switched on.	Switch the device on with POWER button. Select the massage region





**REIMO**<sup>®</sup>

ALLES FÜR REISEMOBILE  
CAMPING & CARAVANS

---

[www.reimo.com](http://www.reimo.com)